 


# TWISTER II



PER:  
FOR:

## AZBE (E)

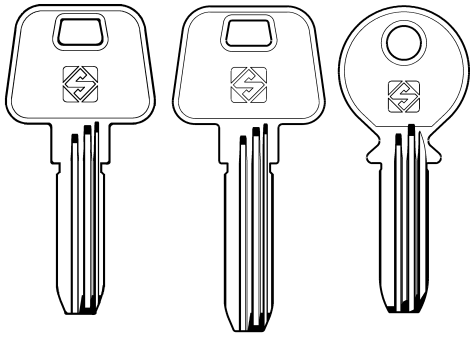

  
AZ6

  
AZ7

  
AZ8

CAVERS (F)

OPTIONAL



### D741446ZB

Tracer point TE11  
Tastatore TE11  
Taster TE11  
Palpeur TE11  
Palpador TE11  
Palpador TE11

 


### D741447ZB

Cutter FE11  
Fresa FE11  
Fräser FE11  
Fraise FE11  
Fresa FE11  
Fresa FE11

PER:  
FOR:

## CISA (I)

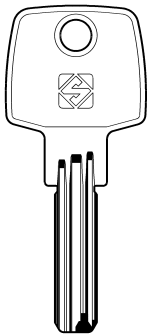

  
CS48

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03



### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

 


# TWISTER II



PER:  
FOR:

## CISA (I)

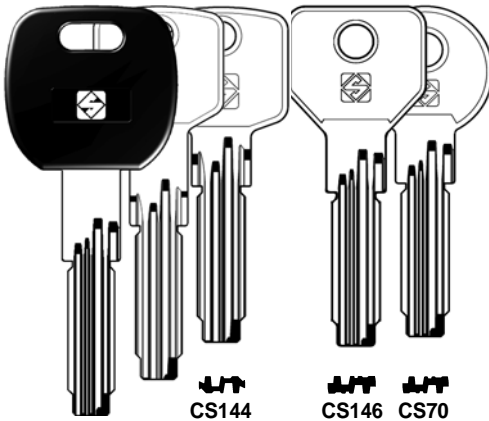

CS144

CS146 CS70

CS62P CS62

CS70P CS115

CS116P CS139


CS139P CS140

CS141

CS145

NEW ASTRAL - ASIX

 OPTIONAL

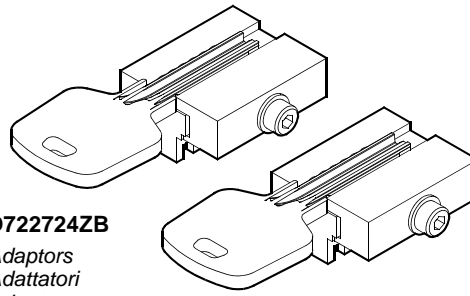

### D722724ZB

Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03

 


### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

PER:  
FOR:

## ELZETT (H)

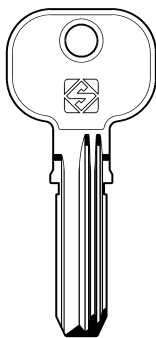

EL9

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03



### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

 


# TWISTER II



PER:  
FOR:

## FICHET (F)

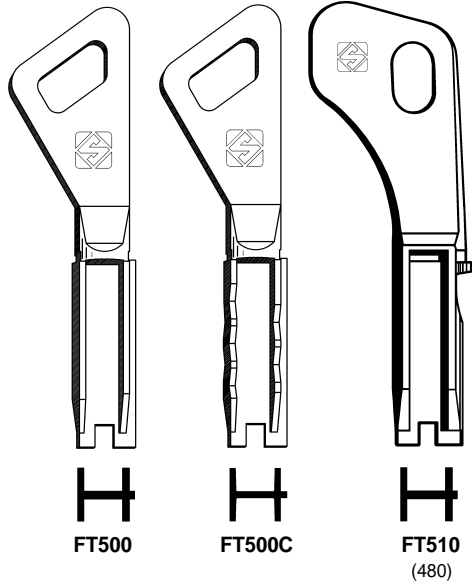


STANDARD



### D741432ZB

 Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04




### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:
 
## FTH (F)

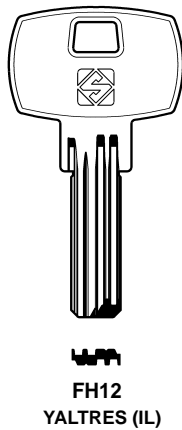

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03

 


### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

PER:  
FOR:

## ISEO (I)

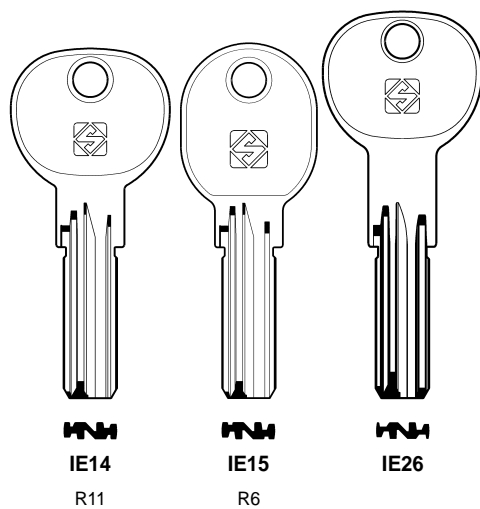

STANDARD



### D741128ZB

Tracer point TE01  
Tastatore TE01  
Taster TE01  
Palpeur TE01  
Palpador TE01  
Palpador TE01



### D741127ZB

Cutter FE01  
Fresa FE01  
Fräser FE01  
Fraise FE01  
Fresa FE01  
Fresa FE01



# TWISTER II




PER:  
FOR:

## JIS (E)



**JS5P**

 OPTIONAL

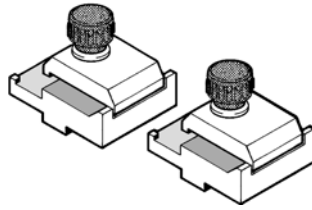

### D701664ZB

 
Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores

STANDARD



### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04




### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:
 
## KABA (CH)

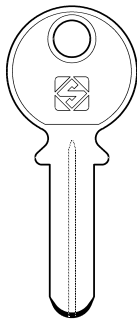

**KA1**

8

LÅSBOLAGET (S)

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03

 


### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03


PER:  
FOR:

## KABA (CH)



**KA8**

 OPTIONAL



### D710008ZB

 
Adaptors for KABA-Micro  
Adattatori per chiavi KABA-Micro  
Adapters für KABA-Micro Schlüssle  
Adaptateurs pour clés KABA-Micro  
Adaptadores para llaves KABA-Micro  
Adaptadores para chaves KABA-Micro

OPTIONAL



### D741487B

Tracer point TE13  
Tastatore TE13  
Taster TE13  
Palpeur TE13  
Palpador TE13  
Palpador TE13



### D741488B

Cutter FE13  
Fresa FE13  
Fräser FE13  
Fraise FE13  
Fresa FE13  
Fresa FE13

 


# TWISTER II



PER:  
FOR:

## MCM (E)

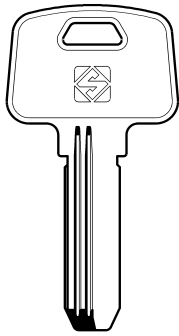


  
MC10R

OPTIONAL



### D741476ZB

 Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores

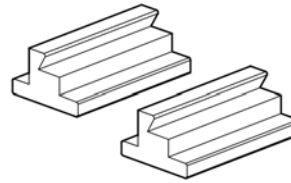

OPTIONAL



### D741436ZB

Tracer point TE06  
Tastatore TE06  
Taster TE06  
Palpeur TE06  
Palpador TE06  
Palpador TE06

 


### D741437ZB

Cutter FE06  
Fresa FE06  
Fräser FE06  
Fraise FE06  
Fresa FE06  
Fresa FE06

PER:  
FOR:

## MCM (E)

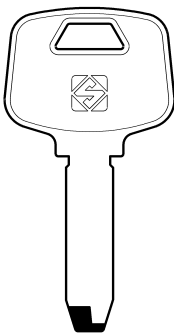

  
MC9

OPTIONAL



### D741442ZB

Tracer point TE09  
Tastatore TE09  
Taster TE09  
Palpeur TE09  
Palpador TE09  
Palpador TE09



### D741443ZB

Cutter FE09  
Fresa FE09  
Fräser FE09  
Fraise FE09  
Fresa FE09  
Fresa FE09

OPTIONAL



### D741444ZB

Tracer point TE10  
Tastatore TE10  
Taster TE10  
Palpeur TE10  
Palpador TE10  
Palpador TE10



### D741445ZB

Cutter FE10  
Fresa FE10  
Fräser FE10  
Fraise FE10  
Fresa FE10  
Fresa FE10

STANDARD



### D741128ZB

Tracer point TE01  
Tastatore TE01  
Taster TE01  
Palpeur TE01  
Palpador TE01  
Palpador TE01



### D741127ZB

 
Cutter FE01  
Fresa FE01  
Fräser FE01  
Fraise FE01  
Fresa FE01  
Fresa FE01



# TWISTER II



PER: **MUL.T.LOCK (IL)**  
FOR:

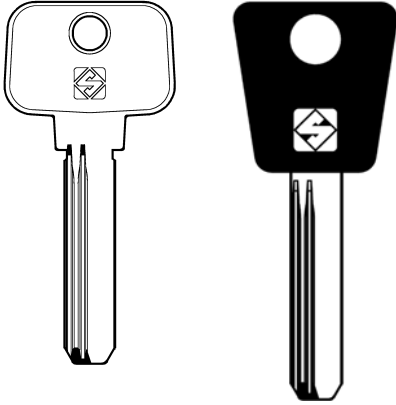

MTK13R  
 MTK15R  
 7X7  
 MTK13RAP  
 MTK15RAP  
 7X7 (66)

OPTIONAL

 


**D741446ZB**  
 Tracer point TE11  
 Tastatore TE11  
 Taster TE11  
 Palpeur TE11  
 Palpador TE11  
 Palpador TE11



**D741447ZB**  
 Cutter FE11  
 Fresa FE11  
 Fräser FE11  
 Fraise FE11  
 Fresa FE11  
 Fresa FE11

PER: **MUL.T.LOCK (IL)**  
FOR:

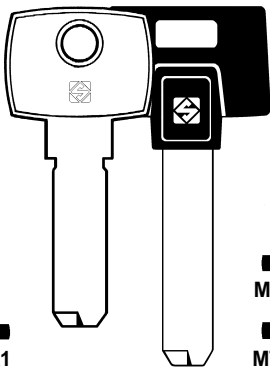

MTK1  
 MTK2P  
 MTK3P

 
STANDARD



**D741128ZB**  
 Tracer point TE01  
 Tastatore TE01  
 Taster TE01  
 Palpeur TE01  
 Palpador TE01  
 Palpador TE01



**D741127ZB**  
 Cutter FE01  
 Fresa FE01  
 Fräser FE01  
 Fraise FE01  
 Fresa FE01  
 Fresa FE01

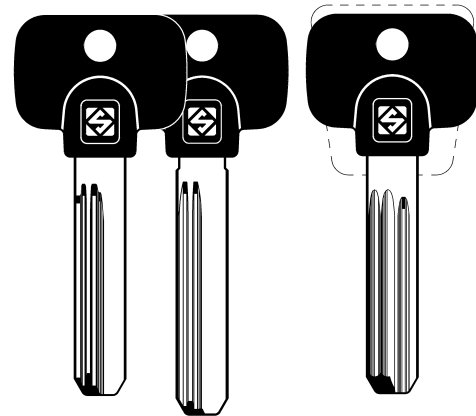

MTK10RP  
 MTK4RPX  
 MTK12RP  
 Junior  
 MTK4P  
 MTK4RP  
 MTK7RP  
 MTK8RP  
 MTK9RP

OPTIONAL



**D741440ZB**  
 Tracer point TE08  
 Tastatore TE08  
 Taster TE08  
 Palpeur TE08  
 Palpador TE08  
 Palpador TE08



**D741441ZB**  
 Cutter FE08  
 Fresa FE08  
 Fräser FE08  
 Fraise FE08  
 Fresa FE08  
 Fresa FE08




# TWISTER II



 PER:  
FOR:

## MOTTURA (I)

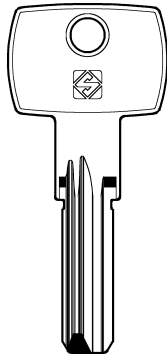

**GVY1R**

DEFENDER

OPTIONAL



### D741446ZB

Tracer point TE11  
Tastatore TE11  
Taster TE11  
Palpeur TE11  
Palpador TE11  
Palpador TE11

 


### D741447ZB

Cutter FE11  
Fresa FE11  
Fräser FE11  
Fraise FE11  
Fresa FE11  
Fresa FE11

PER:  
FOR:

## SEA (CH)

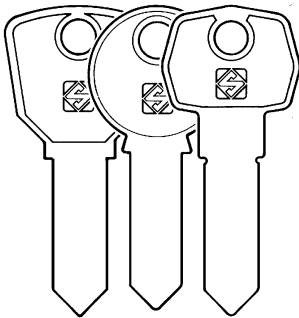

**SEB1 SEB2 SEB3**

SEA 23 SEA SEA 3  
SEA 20 SEA 2

EZCURRA (E)

OPTIONAL



### D741448ZB

Tracer point TE12  
Tastatore TE12  
Taster TE12  
Palpeur TE12  
Palpador TE12  
Palpador TE12



### D741449ZB

Cutter FE12  
Fresa FE12  
Fräser FE12  
Fraise FE12  
Fresa FE12  
Fresa FE12

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03



 
### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

for SEB1 - SEB3 only  
solo per SEB1 - SEB3  
Nur für SEB1 - SEB3  
Seulement pour SEB1 - SEB3  
Solo para SEB1 - SEB3

PER:  
FOR:

## SECURITAL (I)

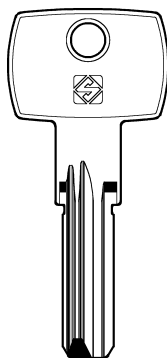

**GVY1R**

Psei

OPTIONAL



### D741436ZB

Tracer point TE06  
Tastatore TE06  
Taster TE06  
Palpeur TE06  
Palpador TE06  
Palpador TE06



### D741437ZB

Cutter FE06  
Fresa FE06  
Fräser FE06  
Fraise FE06  
Fresa FE06  
Fresa FE06

 


# TWISTER II



PER:  
FOR:

## STS (E)

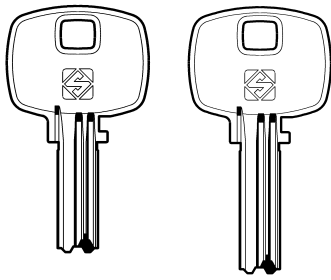

STS5


STS6

OPTIONAL



### D741476ZB

 Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores

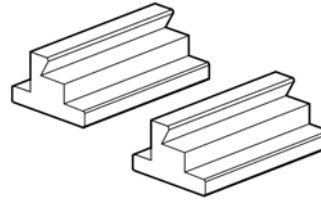

OPTIONAL



### D741430ZB

Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03

 


### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03

PER:  
FOR:

## TESA (E)

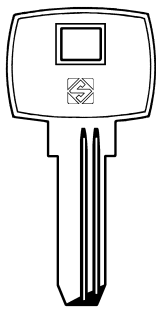

TE4  
T10

TE4R

OPTIONAL



### D741446ZB

Tracer point TE11  
Tastatore TE11  
Taster TE11  
Palpeur TE11  
Palpador TE11  
Palpador TE11

 


### D741447ZB

Cutter FE11  
Fresa FE11  
Fräser FE11  
Fraise FE11  
Fresa FE11  
Fresa FE11

PER:  
FOR:

## TESA (E)

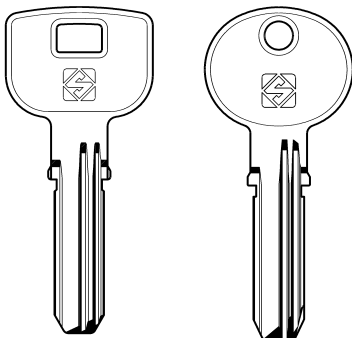

TE5  
T80


TE7  
T60

OPTIONAL



### D741430ZB

 Tracer point TE03  
Tastatore TE03  
Taster TE03  
Palpeur TE03  
Palpador TE03  
Palpador TE03



### D741431ZB

Cutter FE03  
Fresa FE03  
Fräser FE03  
Fraise FE03  
Fresa FE03  
Fresa FE03



 


# TWISTER II



PER:  
FOR:

## ZADI (I)

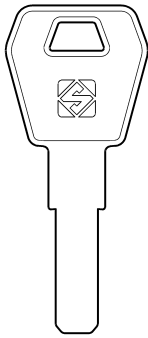

**ZD25**

OPTIONAL



### D741434ZB

Tracer point TE05  
Tastatore TE05  
Taster TE05  
Palpeur TE05  
Palpador TE05  
Palpador TE05

 


### D741435ZB

Cutter FE05  
Fresa FE05  
Fräser FE05  
Fraise FE05  
Fresa FE05  
Fresa FE05

PER:  
FOR:


## BMW (D)

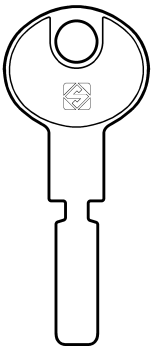

**HU59**


**HU63**

 **HUF (D)**  
**TIBBE (D)**

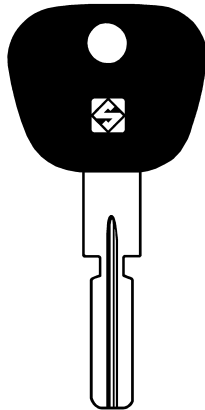

**HU58AP**

 OPTIONAL

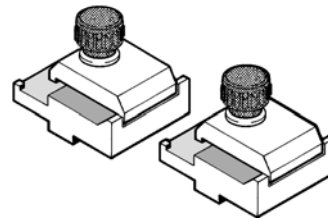

### D701664ZB

Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores

STANDARD



### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04

 


### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:

## BMW (D)

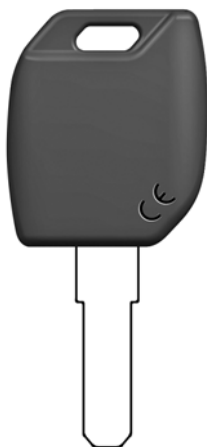

**BW9MH**

OPTIONAL



### D741434ZB

Tracer point TE05  
Tastatore TE05  
Taster TE05  
Palpeur TE05  
Palpador TE05  
Palpador TE05



### D741435ZB

Cutter FE05  
Fresa FE05  
Fräser FE05  
Fraise FE05  
Fresa FE05  
Fresa FE05

 


# TWISTER II



PER:  
FOR:

## FORD (EU)

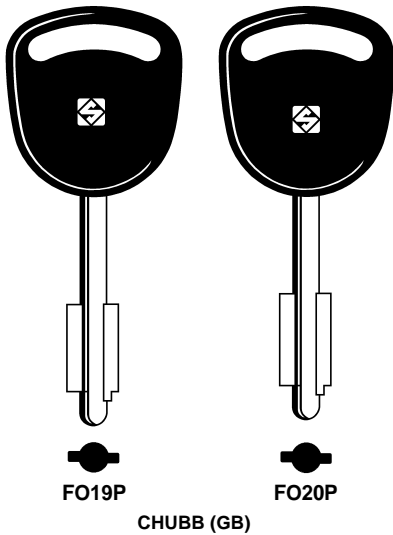


OPTIONAL



### D741450ZB

 Adaptors for FO19P-FO20P keys  
Adattatori per chiavi FO19P-FO20P  
Adapters für FO19P-FO20P Schlüssel  
Adaptateurs pour clés FO19P-FO20P  
Adaptadores para llaves FO19P-FO20P  
Adaptadores para chaves FO19P-FO20P

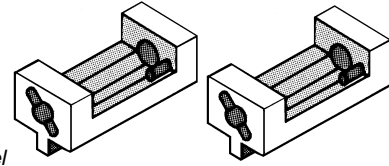


OPTIONAL



### D741434ZB

 Tracer point TE05  
Tastatore TE05  
Taster TE05  
Palpeur TE05  
Palpador TE05  
Palpador TE05




### D741435ZB

Cutter FE05  
Fresa FE05  
Fräser FE05  
Fraise FE05  
Fresa FE05  
Fresa FE05

PER:  
FOR:
 
## FORD (EU + USA)

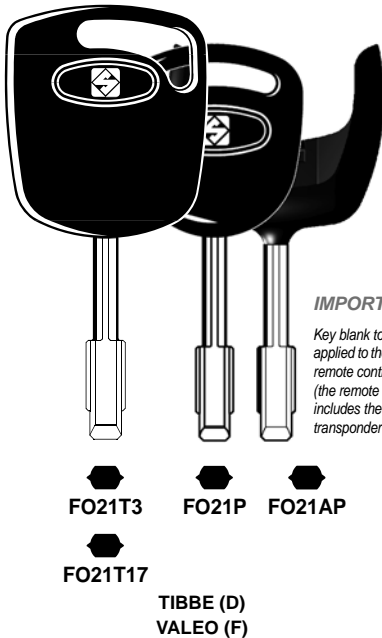

### IMPORTANT!

 
Key blank to be applied to the original remote control (the remote control includes the transponder chip)

OPTIONAL



### D741409ZB

Code attachment  
Dispositivo a codice  
Code-Vorrichtung  
Dispositif à code  
Dispositivo a código  
Dispositivo por código

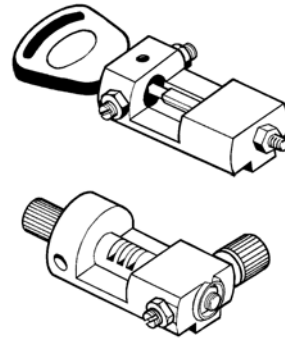

STANDARD

### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04

 


### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:

## HONDA (J)

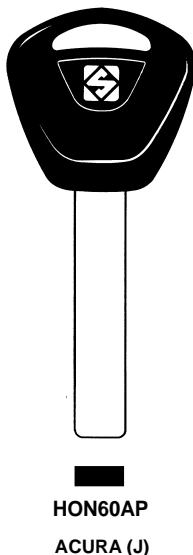

OPTIONAL



### D741434ZB

Tracer point TE05  
Tastatore TE05  
Taster TE05  
Palpeur TE05  
Palpador TE05  
Palpador TE05



### D741435ZB

Cutter FE05  
Fresa FE05  
Fräser FE05  
Fraise FE05  
Fresa FE05  
Fresa FE05

 


# TWISTER II



PER:  
FOR:

## HONDA (J)

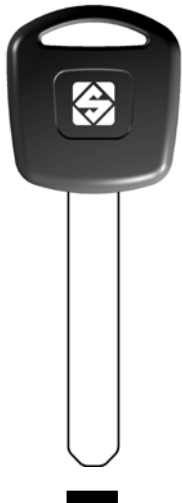

HON66GP


HON66T5  
HON66T6  
HON66T14  
HOV01T5

STANDARD



### D741432ZB

 Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04




### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:
 
## HUF (D)

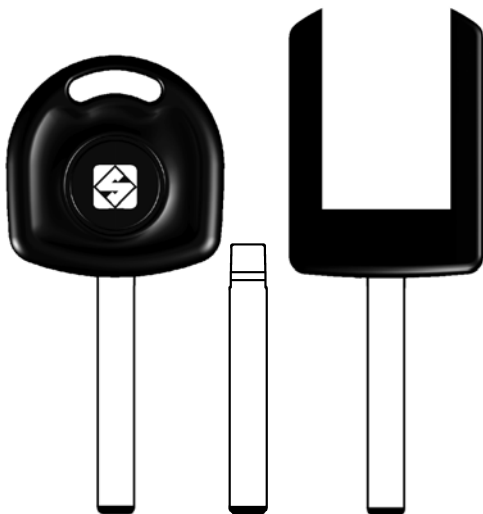

HU100T12

HU100T

HU100BT12

OPEL

HU100AT12

STANDARD



### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04

 


### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:

## HUF (D)

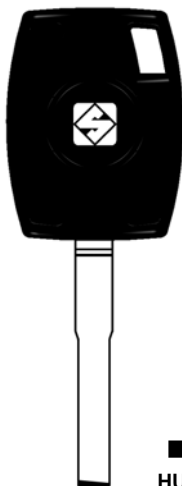

HU101...

STANDARD



### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04



### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

 


# TWISTER II



PER:  
FOR:

**HUF (D)**

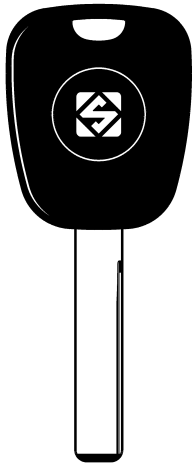


**HU92RP**

OPTIONAL



**D727645ZB**

 Adaptors A16 for HU92RP keys  
Adattatori A16 per chiavi HU92RP  
Adapters A16 für HU92RP Schlüssel  
Adaptateurs A16 pour clés HU92RP  
Adaptadores A16 para llaves HU92RP  
Adaptadores A16 para chaves HU92RP

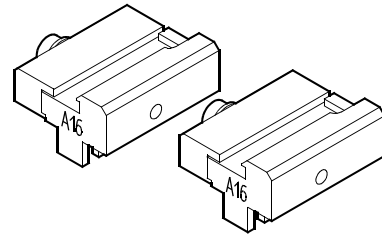


STANDARD



**D741432ZB**

 Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04



**D741433ZB**

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:

**HUF (D)**



**HU83T5**



**HU83T**




**HU107T**

STANDARD



**D741432ZB**

 Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04




**D741433ZB**

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04



 
# TWISTER II

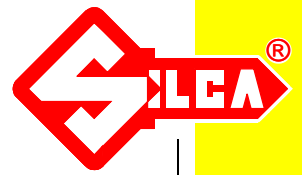


PER:  
FOR:

## MERCEDES (D)

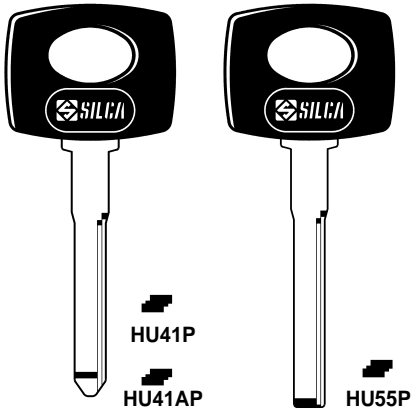 

HU41P  
HU41AP

 HU55P

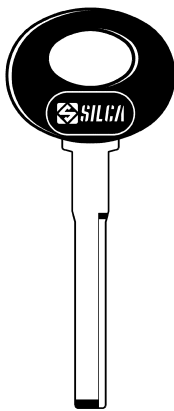

HU61AP




HU64P

HU64T  
HUF (D)

HU65AP

## OPTIONAL

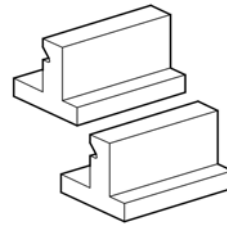 

### D726291ZB

Adapters for MERCEDES keys  
Adattatori per chiavi MERCEDES  
Adapters für MERCEDES Schlüssel  
Adaptateurs pour clés MERCEDES  
Adaptadores para llaves MERCEDES  
Adaptadores para chaves MERCEDES

## STANDARD



### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04



### D741433ZB

 
Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04



# TWISTER II




PER:  
FOR: **MERCEDES (D)**

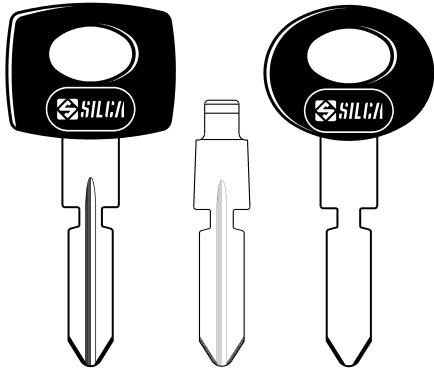

**HU39P**  
**HU39T**  
**HU40P**  
**HUF (D)**

 OPTIONAL

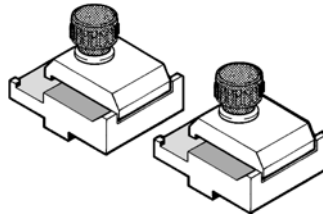

**D701664ZB**

*Adaptors  
Adattatori  
Adapters  
Adaptateurs  
Adaptadores  
Adaptadores*

STANDARD



**D741432ZB**

 
*Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04*



**D741433ZB**

*Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04*

PER:  
FOR: **OPEL-VAUXHALL (D)**

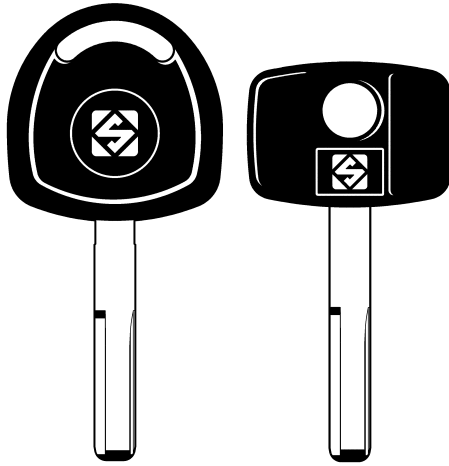

**HU43T9**  
**HU43AT9**  
**HU43T**  
**HU43TGM**


**HU43P**

OPTIONAL



**D741429ZB**

 *Code device  
Dispositivo a codice  
Code-Vorrichtung  
Dispositif à code  
Dispositivo a código  
Dispositivo por código*

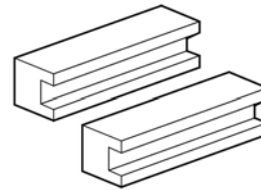

STANDARD




**D741432ZB**

 *Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04*



**D741433ZB**

*Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04*

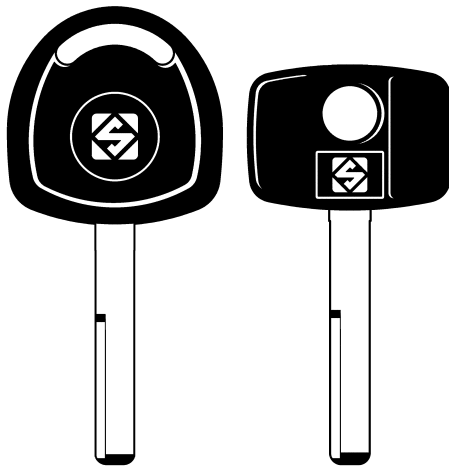

**YM27T2**

**YM27P**

 





# TWISTER II




PER:  
FOR:
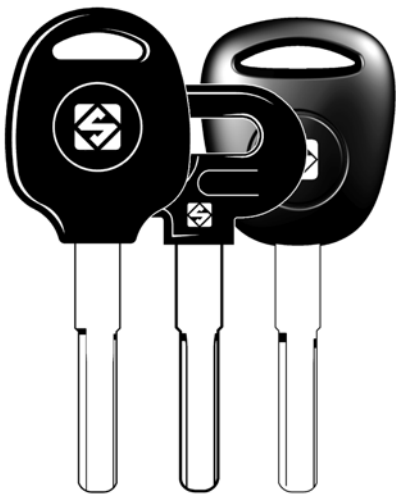
## SAAB (S)



 **YM30BP**  
 **YM30P**  
 **YM30T5**  
**VALEO-YMOS (D)**      **YMOS (D)**

 OPTIONAL

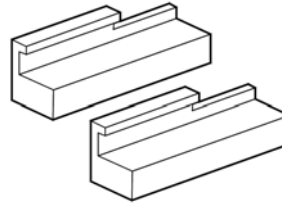

### D741427ZB

*Adaptors for YM30P-YM30BP keys*  
*Adattatori per chiavi YM30P-YM30BP*  
*Adapters für YM30P-YM30BP Schlüssel*  
*Adaptateurs pour clés YM30P-YM30BP*  
*Adaptadores para llaves YM30P-YM30BP*  
*Adaptadores para chaves YM30P-YM30BP*

STANDARD



### D741432ZB

*Tracer point TE04*  
*Tastatore TE04*  
*Taster TE04*  
*Palpeur TE04*  
*Palpador TE04*  
*Palpador TE04*

 


### D741433ZB

*Cutter FE04*  
*Fresa FE04*  
*Fräser FE04*  
*Fraise FE04*  
*Fresa FE04*  
*Fresa FE04*

PER:  
FOR:

## TRW SIPEA (I)

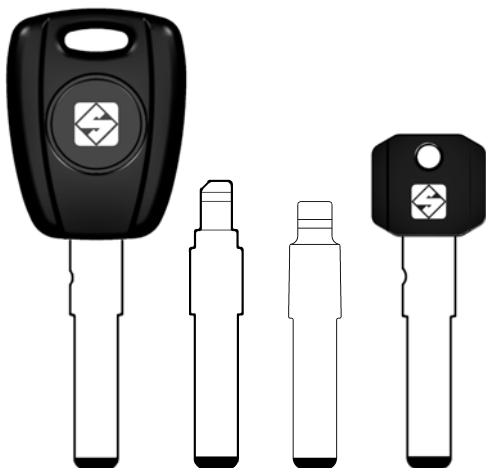

 **SIP22LP**  
 **SIP29T**  
 **SIP18T**  
 **SIP22KP**  
 **SIP22T5**

OPTIONAL



### D741434ZB

*Tracer point TE05*  
*Tastatore TE05*  
*Taster TE05*  
*Palpeur TE05*  
*Palpador TE05*  
*Palpador TE05*



### D741435ZB

*Cutter FE05*  
*Fresa FE05*  
*Fräser FE05*  
*Fraise FE05*  
*Fresa FE05*  
*Fresa FE05*



# TWISTER II



PER:  
FOR: **TOYOTA (J)**





  
**TOY40BT4**  
TOY40  
TOY40P  
TOY40AP

  
**TOY48P**  
  
**TOY48BT4**  
ARISTO

  STANDARD





**D741432ZB**  
Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04



**D741433ZB**  
Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR: **VALEO (F)**





   
**VA2T14 VA6 ...**

  STANDARD



**D741432ZB**  
Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04



**D741433ZB**  
Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04






# TWISTER II




 PER:  
FOR:


## VOLVO (S)

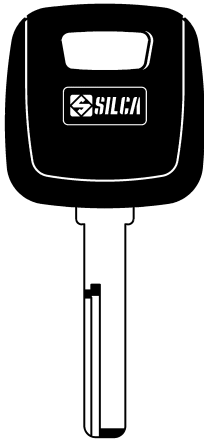

  
HU56RAT2

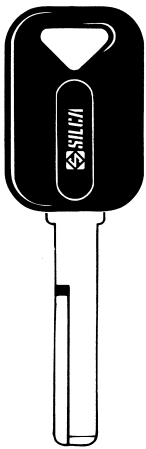 

  
HU57RP

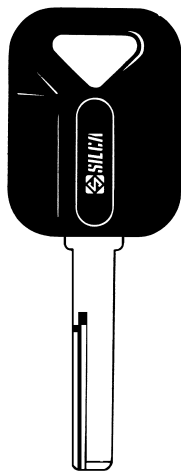 



  
HU56RP

### STANDARD


  
#### D741432ZB

Tracer point TE04  
Tastatore TE04  
Taster TE04  
Palpeur TE04  
Palpador TE04  
Palpador TE04




#### D741433ZB

Cutter FE04  
Fresa FE04  
Fräser FE04  
Fraise FE04  
Fresa FE04  
Fresa FE04

PER:  
FOR:
 
## ZADI (I)

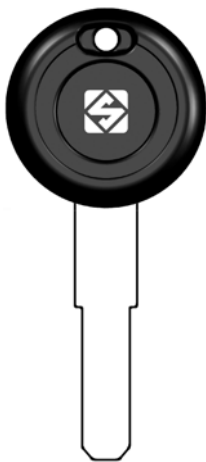


  
ZD30T5

### OPTIONAL


 
#### D741434ZB

Tracer point TE05  
Tastatore TE05  
Taster TE05  
Palpeur TE05  
Palpador TE05  
Palpador TE05



#### D741435ZB

Cutter FE05  
Fresa FE05  
Fräser FE05  
Fraise FE05  
Fresa FE05  
Fresa FE05

 


# TWISTER II



PER:  
FOR:


**AUDI (D)**  
**FORD (D)**  
**PORSCHE (D)**  
**SEAT (E)**  
**SKODA (CZ)**  
**VOLKSWAGEN (D)**

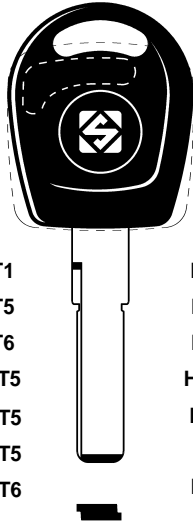

HU66T1	HU66AT6
HU66T5	HU66T10
HU66T6	HU66T15
HU66AT5	HU66BT15
HU66CT5	HU66BT1
HU66DT5	HU66PL
HU66CT6	HU66T5L
	HU75T
	HU103T

HUF (D)  
WITTE (D)

 OPTIONAL

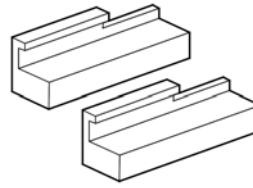

## D741427ZB

*Adaptors for YM30P-YM30BP keys*  
*Adattatori per chiavi YM30P-YM30BP*  
*Adapters für YM30P-YM30BP Schlüssel*  
*Adaptateurs pour clés YM30P-YM30BP*  
*Adaptadores para llaves YM30P-YM30BP*  
*Adaptadores para chaves YM30P-YM30BP*

STANDARD

## D741432ZB

*Tracer point TE04*  
*Tastatore TE04*  
*Taster TE04*  
*Palpeur TE04*  
*Palpador TE04*  
*Palpador TE04*



## D741433ZB

*Cutter FE04*  
*Fresa FE04*  
*Fräser FE04*  
*Fraise FE04*  
*Fresa FE04*  
*Fresa FE04*

PER:  
FOR:

**CENTURY (USA)**

CEN5T (10)

**CHICAGO (USA)**

CH16T (9.2)  
CH17T (10)

**L&F (GB)**

**ERA (GB)**

**AGA (E)**

**MERONI (I)**

MER22T (9.50)  
MER25T (9.50)

**P.CORTELLEZZI (I)**

 
 
PC12T (9.60)  
PC12TP (9.60)  
PC15T (9.60)  
PC15TP (9.60)

**SILCA (I)**


SLC1TP (9.60)  
SLC2TP (9.60)

**SIDLEEN (USA)**

SD3T (9.50)

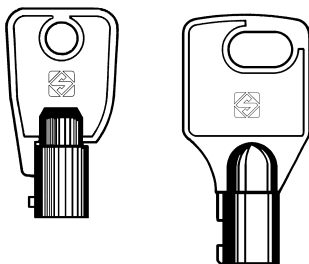

OPTIONAL

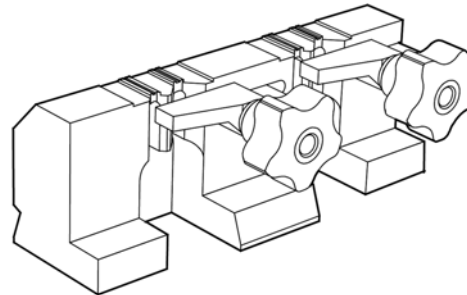 

## D741428ZB

*Device for tubular keys*  
*Dispositivo per chiavi tubolari*  
*Vorrichtung für Steckschlüssel*  
*Dispositif pour clés tubulaires*  
*Dispositivo para llaves tubulares*  
*Dispositivo para chaves tubulares*

OPTIONAL



## D741438ZB

*Tracer point TE07*  
*Tastatore TE07*  
*Taster TE07*  
*Palpeur TE07*  
*Palpador TE07*  
*Palpador TE07*



## D741439ZB

*Cutter FE07*  
*Fresa FE07*  
*Fräser FE07*  
*Fraise FE07*  
*Fresa FE07*  
*Fresa FE07*

